


How to connect a
Nest Thermostat to
BeoLink Gateway

First Step:

Before adding the Nest Thermostat in the BeoLink Gateway menu, ensure that all Nest Thermostats have been setup via the Next App. Also create a Nest account @ www.home.nest.com

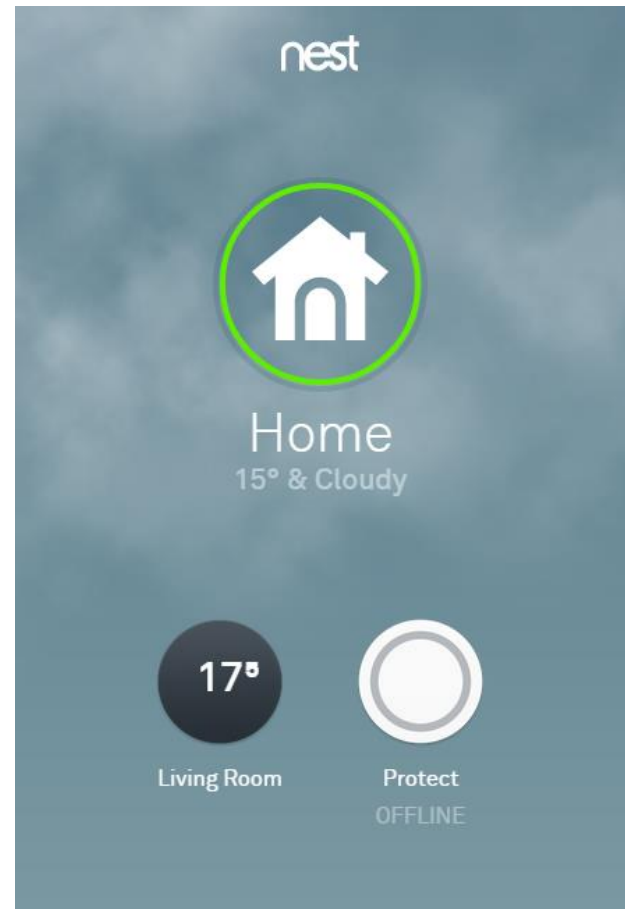

Systems

Filter
Hus / 1. Kitchen +
No systems defined in this zone
Hus / 2. Living room +
No systems defined in this zone
Hus / 3. Bedroom +
No systems defined in this zone
ImmersiveExperience / BeoHome +
No systems defined in this zone
ImmersiveExperience / BeoLink2014_Vi... +
No systems defined in this zone
Main / global +
BeoLink
Virtual Resources
Udenfor / 4. Garage +
No systems defined in this zone

Add a Nest thermostat system. Click on the plus sign

Systems

Filter

- Hus / 1. Kitchen +
No systems defined in this zone
- Hus / 2. Living room +
No systems defined in this zone
- Hus / 3. Bedroom +
No systems defined in this zone
- ImmersiveExperience / BeoHome +
No systems defined in this zone
- ImmersiveExperience / BeoLink2014_Vi... +
No systems defined in this zone
- Main / global +

Nest thermostat

- KNX - EIB
- Clipsal
- Legrand - Bticino
- SmartHouse
- SmartHouse-SH2
- Lutron Homeworks Interactive
- Lutron Homeworks QS - Radio Ra2 - Grafik QS
- Lutron GRAFIK Eye
- Lutron Radio Ra
- Vantage
- Dynalite
- Conson XP
- Custom Strings
- Velux
- Philips Hue
- Global Cache iTach IP2CC
- Global Cache iTach IP2SL
- Global Cache iTach IP2IR
- Nest thermostat**
- Philips Hue Mod

System connection status: **BeoLink**



Systems

- Filter
- Hus / 1. Kitchen +
No systems defined in this zone
- Hus / 2. Living room +
No systems defined in this zone
- Hus / 3. Bedroom +
No systems defined in this zone
- ImmersiveExperience / BeoHome +
No systems defined in this zone
- ImmersiveExperience / BeoLink2014_Vi... +
No systems defined in this zone
- Main / global +
- BeoLink
- Nest thermostat** ▶
- Virtual Resources
- Udenfor / 4. Garage +
No systems defined in this zone

global / Nest thermostat
— Driver name: Nest thermostat

Go to system help Delete

Settings

Name

Zone

Connection settings

Connection type

Pin code

Apply

Press this link to get a Pin code. You will be directed to a Nest webpage.

[Get PIN code for BeoLink NEST driver](#)

nest




Welcome home.

Sign in

[Forgot Password >](#)

[Sign up >](#)

If not already logged in you will have to login to your Nest account here

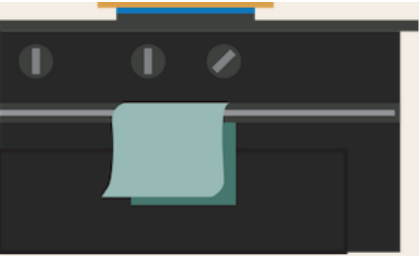

BeoLink Gateway.



See your Nest Protect's smoke, carbon monoxide, and battery info.

Allows BeoLink Gateway to display Smoke+CO alarm state.

Want Nest to stop working with Bang & Olufsen? Go to account settings in the Nest app.

At Nest, we take your privacy seriously. And we believe in being open and honest about using your data.

[Learn more >](#)

ACCEPT

Scroll down the page and press accept

Bang & Olufsen and Nest will use this information in accordance with their respective terms of service and privacy policies.

You are responsible for making sure that the way you use Nest Cam complies with law, including any applicable privacy or data protection laws.

google@beointegration.com [Sign in to a different account >](#)



A stylized illustration of a kitchen. On the left, a black stove has a brown pot on it with white steam rising. A teal towel hangs from the oven handle. On the right, a grey refrigerator with a water dispenser is visible. In the center, a white rounded rectangle contains the word 'Pincode' in blue, followed by the instruction 'Use this pincode to connect with Nest.' and the alphanumeric string 'A B K L M T 3 4'. A red arrow points from a red-bordered box containing the text 'Copy the pin code' to the alphanumeric string.

Pincode

Use this pincode to connect with Nest.

A B K L M T 3 4

Copy the pin code

Systems

Filter
Hus / 1. Kitchen +
No systems defined in this zone
Hus / 2. Living room +
No systems defined in this zone
Hus / 3. Bedroom +
No systems defined in this zone
ImmersiveExperience / BeoHome +
No systems defined in this zone
ImmersiveExperience / BeoLink2014_Vi... +
No systems defined in this zone
Main / global +
BeoLink
Nest thermostat ▶
Virtual Resources
Udenfor / 4. Garage +
No systems defined in this zone

global / Nest thermostat

Go to system help Delete

— Driver name: Nest thermostat

Settings

Name

Zone

Connection settings

Connection type

Pin code

Apply

1. Paste in the pin code and press apply

Get PIN code for BeoLink NEST driver

2. After few seconds, the connection status turns green.

Resources by system

Filter

- Main / global
- BeoLink
- Nest thermostat**
- Virtual Resources

Resources in Nest thermostat

Filter

Zone	Name	Type	Address	
Hus/1. Kitchen	Kitchen	Thermostat 1SP (THERMOSTA	GTc_g3llmY_qe1x	Add

Captured events

Clear Close

Add on zone: Hus/1. Kitchen Filter

Time	Description	Action
No events captured so far for "Nest thermostat" system!		

Import resources

Go to resources / Nest Thermostat and press capture. Now add all your thermostats in the zones where they are placed. Or add a zone called i.e. Temperature control

