

How to connect a Philips Hue lighting Bridge to BeoLink Gateway (New Hue bridge)



First Step:

Before adding the bridge in the BeoLink Gateway menu, ensure the Philips hue system is connected and working using the Philips Hue app. Rename the lamps in the app and set the IP address to a fixed address.



Systems

global / BeoLink

— Driver name: BeoLink

Go to system help

Delete

Filter

global / global

BeoLink

Lutron Homeworks QS - Radio Ra2 - Gr...

Virtual Resources

Home / Conservatory

No systems defined in this zone

Home / Dining area

No systems defined in this zone

Home / Kitchen

No systems defined in this zone

Home / Kitchen table

No systems defined in this zone

Home / Living Room

No systems defined in this zone

Settings

Name

BeoLink

Zone

global/global

BeoSound 5

BeoSound5 host

192.168.100.103

Systems

Filter

global / global +

Philips Hue ▾

Add system

BeoLink ▶

Lutron Homeworks QS - Radio Ra2 - Gr...

Virtual Resources

Home / Conservatory +

No systems defined in this zone

Home / Dining area +

No systems defined in this zone

Home / Kitchen +

No systems defined in this zone

Home / Kitchen table +

No systems defined in this zone

Home / Living Room +

No systems defined in this zone

global / BeoLink

— Driver name: BeoLink

Settings

Name BeoLink

Zone global/global

BeoSound 5

BeoSound5 host 192.168.100.103

- global / global +
- BeoLink
- Lutron Homeworks QS - Radio Ra2 - Gr...
- Philips Hue** ▶
- Virtual Resources
- Home / Conservatory +
No systems defined in this zone
- Home / Dining area +
No systems defined in this zone
- Home / Kitchen +
No systems defined in this zone
- Home / Kitchen table +
No systems defined in this zone
- Home / Living Room +
No systems defined in this zone

Settings

Name

Zone

Connection settings

Connection type

Bridge host

Bridge port

Bridge user

Poll interval

Connection settings

Connection type

Philips Hue connection ▼

Enter the Hue Bridge IP address (Fing)

Bridge host

192.168.100.131

Bridge port

80

This field must be empty.
The gateway makes automatically a user.

Bridge user

Poll interval

5

Poll interval= Status updates
Default is 30, but recommended to change to 5-10 seconds.

Apply

Create Philips HUE user on bridge

System connection status:

BeoLink

Lutron Homeworks QS - Radio Ra2 - Grafik QS

Philips Hue

1. Press the connect button on the Hue Bridge



Connection settings

Connection type

Bridge host

Bridge port

Bridge user

Poll interval

Apply

2. Within 30 seconds, click here to create a user on the bridge

Create Philips HUE user on bridge

3. After few seconds, the user will be added.

4. Then the connection status turns green.

System connection status: BeoLink Lutron Homeworks QS - Radio Ra2 - Grafik QS Philips Hue