

How to set up BeoSound Essence Remote for use with another Bang & Olufsen product

BeoSound Essence Remote can be set up for use with another Bang & Olufsen product using one of the 7 different IR mode settings. You can only set up BeoSound Essence Remote for use with one product at a time.

From the factory BeoSound Essence Remote is in mode 0 (Bluetooth) and ready to be paired with BeoSound Essence.

Change the mode setting of BeoSound Essence Remote ...


1. Use a small pin, such as a straightened paper clip to press the mode 'button'.



2. Now the green LEDs on the front of BeoSound Essence Remote show the actual mode setting of BeoSound Essence Remote.
3. While the green LEDs light up, press the < or > buttons to step between the 7 IR modes. For information about which mode to use, see below table.



4. When the requested mode (1- 7) is displayed, wait approximately 5 seconds until the LEDs switch off, to store it.

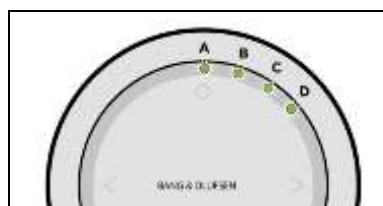

Mode	Description*	For operation of ...	LED A	LED B	LED C	LED D
0	Bluetooth - not paired (factory default)		Flashing	Off	Off	Off
0	Bluetooth - paired	BeoSound Essence	On			
1	BeoRemote One IR BeoSound	A sound system intended for use with BeoRemote One	Off	On	Off	Off
2	Beo4 IR (RADIO)	A sound system intended for use with Beo4	Off	Off	On	Off
3	'Light' mode	A Home Automation System	Off	Off	Off	On

4	Beo4 IR (PLAY)	A sound system intended for use with Beo4 (BeoPlay)	Off	On	On	Off
5	BeoRemote One IR BeoSound (2)	A sound system intended for use with BeoRemote One <i>For the second sound system, if placed in the same room</i>	Off	On	Off	On
6	BeoRemote One IR BeoSound (3)	A sound system intended for use with BeoRemote One <i>For the third sound system, if placed in the same room</i>	Off	Off	On	On
7	BeoRemote One IR BeoVision	A television intended for use with BeoRemote One	Off	On	On	On

*See also EZ2Remote Key Mapping, for details.